

The CudaTel Communications Server is a simple, affordable, and feature-rich telephone system. It can control the VoIP telephone sets in your enterprise as well as handle typical features like voicemail, automated attendants, call queues, multi-party conferences and more. It is common for the CudaTel Communications Server to be physically installed on your network and assigned an IP address as a node on your internal network.

1 Getting Started

This guide provides you with setup instructions for the CudaTel Communications Server. We recommend reading these instructions fully before starting the setup. To begin setting up your CudaTel Communications Server, you will need the following:

- CudaTel Communications Server, AC power cord, phone cables (included)
- Ethernet cables
- VGA monitor, PS2 keyboard (recommended)

2 Physical Installation

To install the CudaTel Communications Server:

1. Fasten the CudaTel Communications Server to a 19-inch rack or place it in a stable location.
2. Connect an Ethernet cable from your network switch to the LAN port on the front of the CudaTel Communications Server.
3. Connect a standard VGA monitor, PS2 keyboard, and an AC power cord to the CudaTel Communications Server. Note: Immediately after connecting an AC power cord to the unit, it may power ON for a few seconds and then power OFF. This is because the unit is designed to automatically return to a powered ON state in the event of a power outage.
4. See Chapter 6 of the Admin Guide for instructions on connecting telephone lines to your CudaTel Communications Server
5. Press the POWER button on the front panel to turn the unit on.



3 Configure IP Address and Network Settings

If you have a monitor connected, the CudaTel Communications Server will display the Boot Menu initially, and the Administrative Console login prompt once fully booted. To begin the configuration:

1. Login to the Administrative Console using the admin login:

Login: admin
Password: admin

```
barracuda login: admin
password:
```

2. Configure the **IP Address, Subnet Mask, Default Gateway, Primary DNS Server** and **Secondary DNS Server** as appropriate for your network.
3. Save your changes.

If you do not have a monitor and keyboard and want to set the IP address for the CudaTel Communications Server using the RESET button on the front panel, press and hold the RESET button per the following table:

IP address	Press and hold RESET for...
192.168.200.200	5 seconds
192.168.1.200	8 seconds
10.1.1.200	12 seconds

4 Open Firewall Ports

If your CudaTel Communications Server is located behind a corporate firewall, open the following ports on your firewall to ensure proper operation.

Port	Direction	TCP	UDP	Usage
22	In/Out	Yes	No	Remote diagnostics and service (recommended)*
53	Out	Yes	Yes	Domain Name Service (DNS)
80	Out	Yes	No	Firmware and Documentation updates
123	In/Out	No	Yes	Network Time Protocol (NTP)
5060	In/Out	Yes	Yes	Standard SIP port
5065	In/Out	Yes	Yes	Custom SIP port for soft phones
16384-32768 (In/Out)	No	Yes	Yes	RTP ports

*Access via Port 22 is required only if Technical Support is requested.

5 Verify and Configure Access from the Web Interface

Use a computer with a Web browser that is connected to the same network as the CudaTel Communications Server and follow these steps:

1. In the browser address bar, enter http:// followed by the IP address of the CudaTel Communications Server. For example, if you configured the Barracuda with an IP address of 192.168.200.200, you would enter the following:
<http://192.168.200.200>
2. Log in to the CudaTel Communications Server Web interface as the administrator:
Username: admin **Password:** 0000 (four zeroes)
3. On the **System Configuration** → **Network** page, perform the following:
 - Verify the values for **IP Address, Subnet Mask, and Gateway** for the LAN interface.

- Check **Enabled** under WAN Interface if you have a dedicated WAN connection. Enter values for **IP Address**, **Subnet Mask**, and **Gateway**.
 - Check **Behind NAT Router** if you have NAT. Click **Auto-Detect** or manually input the external IP Address.
 - Verify the values for **Primary DNS** and **Secondary DNS** Servers.
 - Enter the HTTP proxy server settings if you have a proxy server.
 - Enter the **SMTP Server Address/IP** and **Port**. Enter a target email address to **Send Warnings To**.
 - Do NOT enable **Automatic Provisioning** until you have read the Administrator's Guide.
4. Click **Apply Network Settings** to save all of the information.

6

Update the Firmware

NOTE: It is important to update the system firmware prior to adding phones

1. Press **Start Download**. The download progress is displayed next to the **Cancel Download** button. When the download is complete, the **Install** and **Delete** buttons are displayed.
2. Go to **System Configuration**→**Updates** to check for the latest firmware updates. If there is none available, skip to Step 7.
3. Click the **Install** button to apply the firmware. Or, if you wish to abort the update, click **Delete** to remove the downloaded firmware. To avoid damaging the unit, do NOT power off during an update.
4. After applying the firmware, the system will automatically reboot. Make sure to read the Release Notes to learn about enhancements and new features. It is also good practice to verify settings, as new features may have been included with the firmware update.

7

Change the Administrator Password and Set Time Zone

To avoid unauthorized use, we recommend you change the default administrator password to a more secure password. You can only change the administrator password for the Web interface. You cannot change the password for the Administrative Console, but this is only accessible via the keyboard which you can disconnect at any time.

1. Go to **System Configuration** **Settings**
2. Scroll down to **Change Administrator Password**, enter new password, and click **Change Password**
3. Scroll up to **System Time Zone**, select your time zone, click **Change**. *The system will restart immediately.*

8

Product Activation

Verify that your Energize Updates subscription is activated on your CudaTel Communications Server by going to the **System Dashboard** page. Look under **Updates and Support** for a link that says *This product is not activated. Click to activate.* Click the link and follow the instructions.

9

Synchronize Active Directory (optional)

1. Go to **System Configuration**→**Active Directory** and click **Select Server**.
2. Select an OU (Organizational Unit) to synch to and click **Apply Synch Source Changes**.
3. Wait for a moment, then click **Synchronize Now**.

10

Add Phones

The CudaTel Communications Server can automatically provision (configure) Polycom, Snom, and Cisco VoIP phones. The following steps are for Polycom phones. See Chapter 4 of the Administrator Guide for instructions on Snom and Cisco phones. Repeat the following steps for each phone.

1. Connect a phone to the network, make sure that it has an IP address (or gets one from DHCP) and then set the server address to:

<http://x.x.x.x/provision>

where x.x.x.x is the IP address of your CudaTel Communications Server. When the phone reboots, it will be provisioned.

2. Go to **People, Groups, and Phones**→**People and Groups**→**Unassigned Phones** to see all unassigned phones. Unassigned phones are automatically given an extension number.

11

Add Users

1. Go to **People, Groups, and Phones**, click on **Add New...** and select **Person**.
 2. Enter **First Name**, **Last Name**, and **4-digit PIN**.
 3. Associate an extension to the person in one of two ways. The recommended method is **Select By Choosing A Phone**. This will produce a list of all unassigned phones containing the extension number, the manufacturer and the MAC address for all physical phone (the MAC address is usually found on a sticker on the bottom of the phone).
 4. Select the desired phone, and click **Add**. The phone will reboot to complete the assignment.
 5. Verify phone functionality by dialing ***98** from the newly-assigned phone. If the voicemail system answers then the phone has been set up correctly.
 6. Hang up.
 7. Repeat steps 2 through 7 for each user.
- Users will be able to configure their own voicemail using the PIN you supply to them.

For additional documentation including an Administrator's Guide, visit <http://www.cudatel.com/documentation>.

Contact and Copyright Information

Barracuda Networks, Inc. 201 Depot Street, Suite 100, Ann Arbor, MI 48104 USA • phone: 1.989.720.4000 • www.cudatel.com
Copyright © 2009 Barracuda Networks, Inc. All rights reserved. Use of this product and this manual is subject to license. Information in this document is subject to change without notice. CudaTel Communication Server is a trademark of Barracuda Networks, Inc. All other brand and product names mentioned in this document are registered trademarks or trademarks of their respective holders. 091002-10v04-02-1002